



By plugging into plug number 1 you supply power to the water pump, all lighting on the main deck and all outlets with the number 1 on them.

Plug number 2 is used to supply power to the outlets with the number 2 on them. This is only for use when using crock-pots or similar items.

Open the door attach plugs then close door. The black cover above this box contains circuit breakers. If you loose power check here first then your power supply.